




1. Before install Aaeon85xDisplayDriver_rev01 driver please unload any IEGD driver on your system.

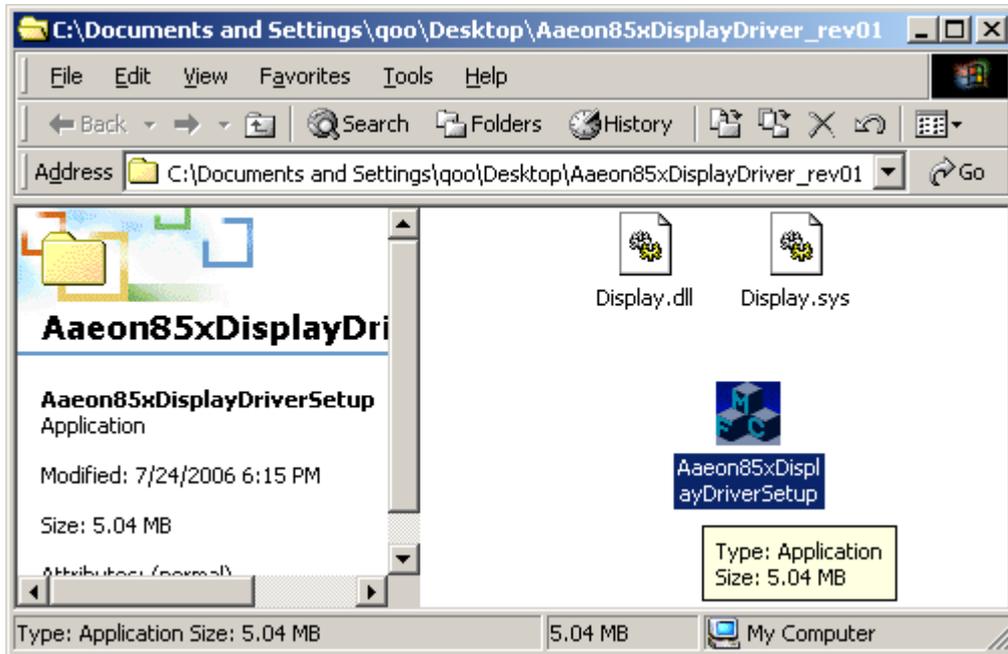

2. Please select “ Uninstall driver and application files “ .

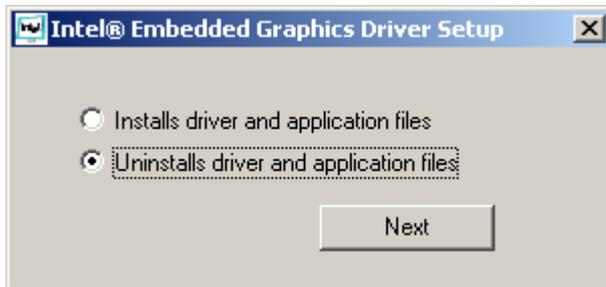

3. Click “Yes”.

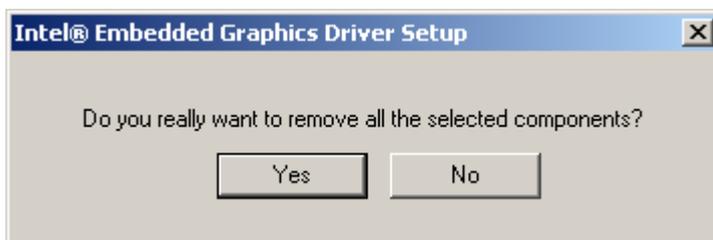

4. Click “Yes “, then reboot your system.




5. Skip this Hardware Wizard message, click “Cancel “.




6. Skip this Hardware Wizard message, click “Cancel “.




7. Please click the Setup.exe

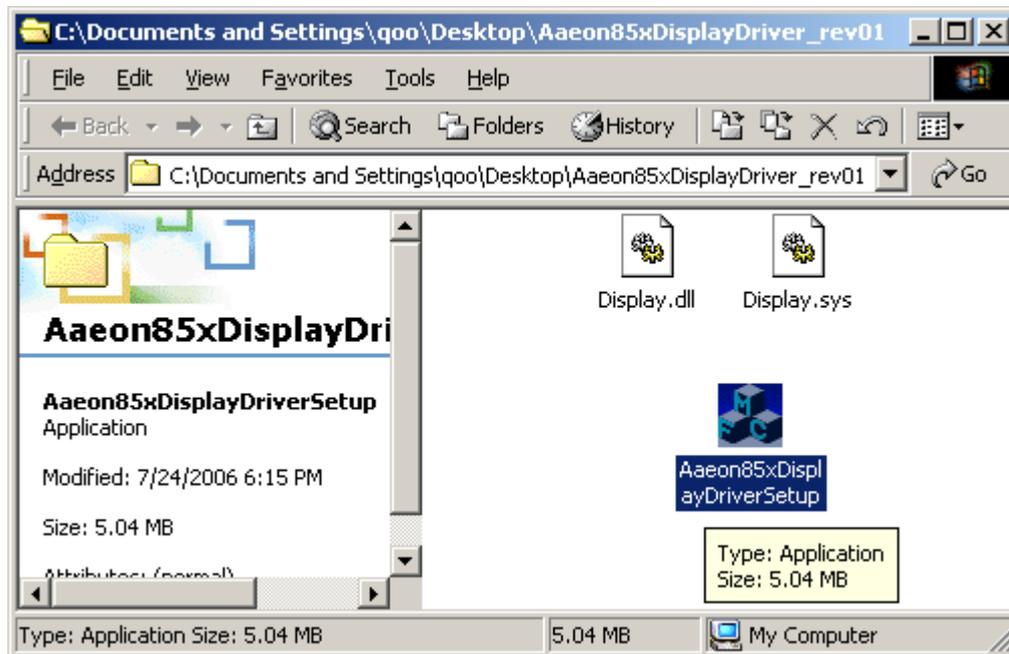


8. Select “ Install driver and application files”, and click “Next”

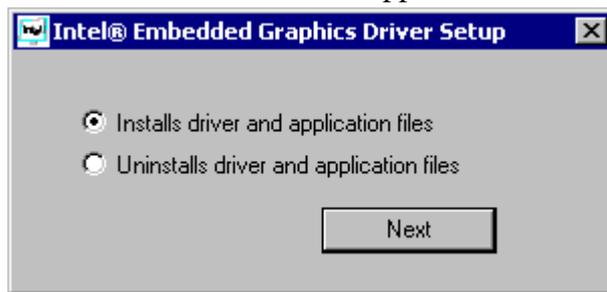


9. Select “I agree “, then click “Install “

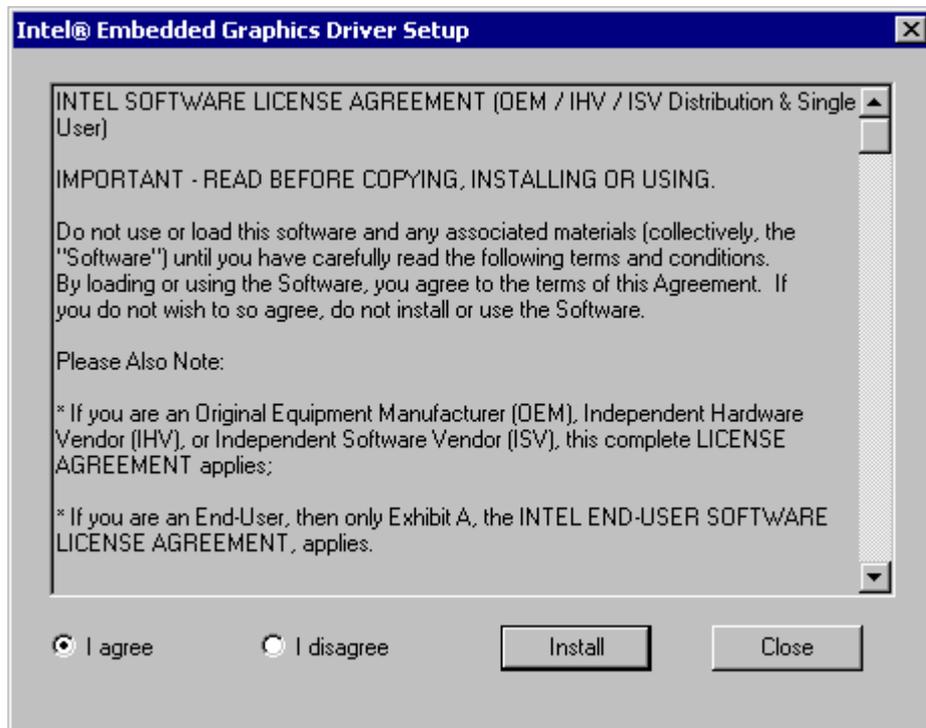


10. Please click “Yes”

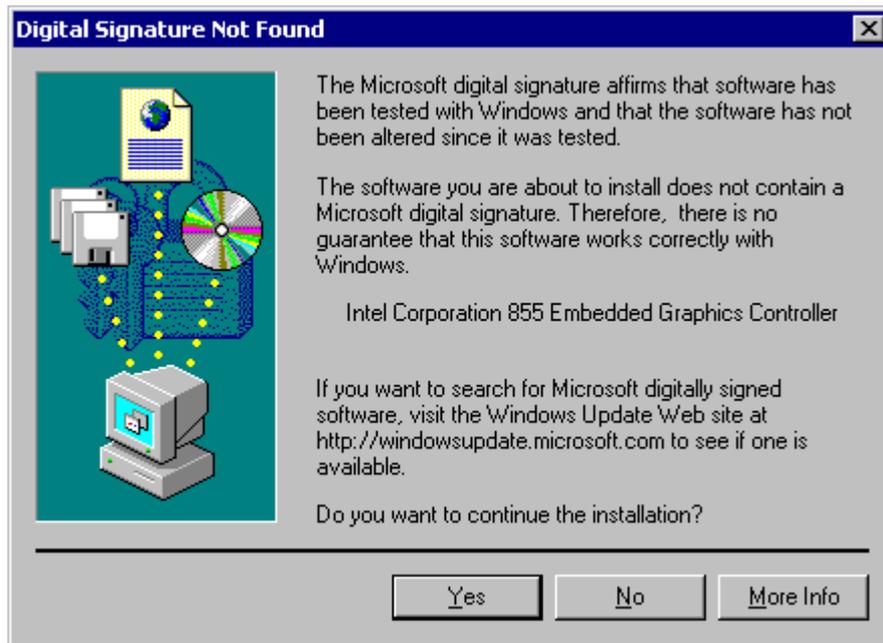


11. Please click “Yes”

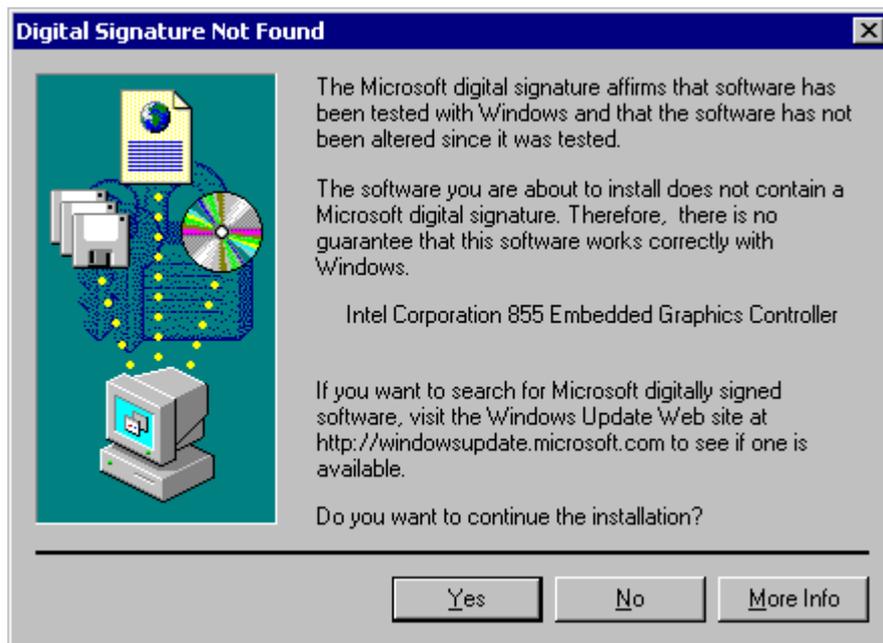

12.

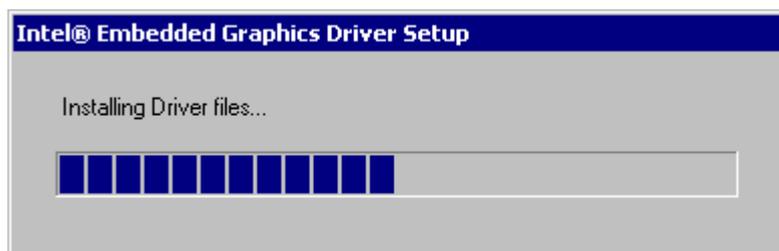

13. Please click “Yes”

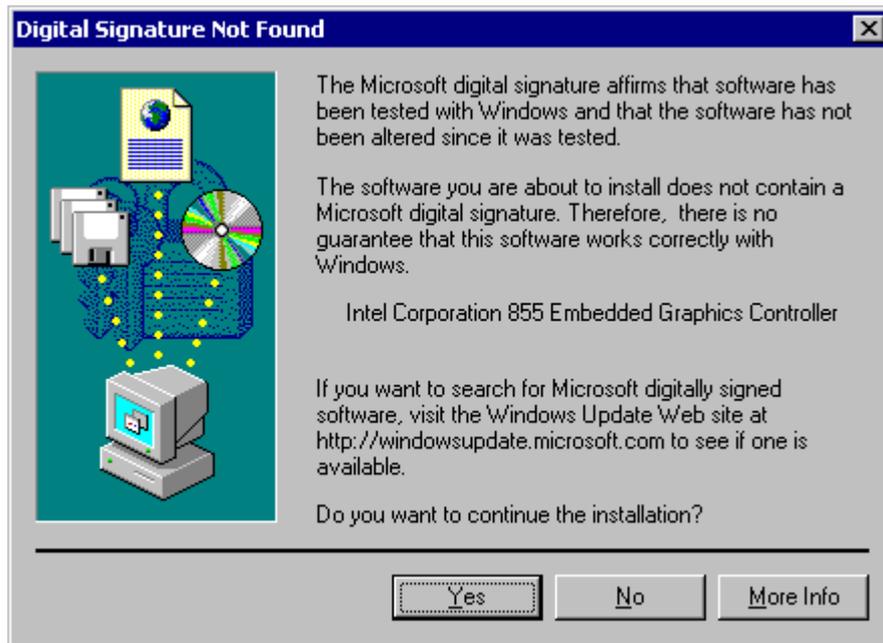

14. Please click “Yes “, and try to put out your CRT connector and reboot your system again.

